

Netcomm NF18AVC - VoIP Setup

Step 1:

Plug modem into computer with the yellow cable supplied. Plug it into a yellow plug on the modem

Step 2:

Open up your internet browser on your computer and use 192.168.20.1 as the URL.




Step 3:

When prompted enter the following

Username: admin

Password: admin

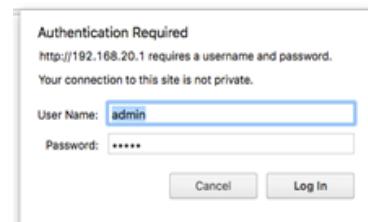

Step 4:

Click on "Voice" from the menu on the left, and then "SIP Basic Setting"



Step 5:


Enable the following and set the Proxy to:

"sip1.leaptel.com.au"

Use SIP Proxy

Use SIP Outbound Proxy

Use SIP Registrar

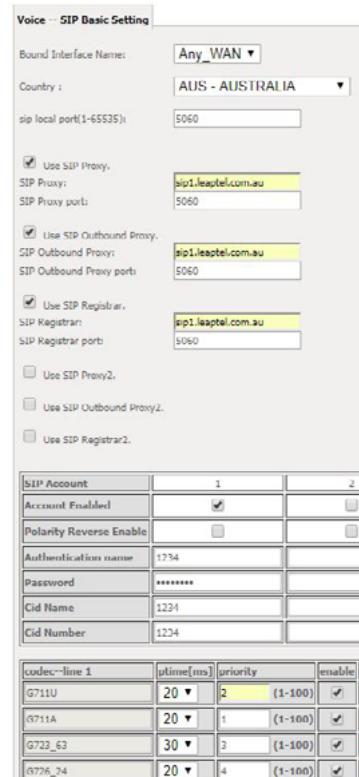

Disable SIP Account 2

For SIP Account 1, set the following:

Authenticaiton Name: Kerio Extension

Password: Simplicity Password

CID Name: Kerio Extension

CID Number: Kerio Extension

For Codec--line 1 change the following:

G711U Priority to: 2

G711A Priority to: 1

Then press "Apply"

Step 6:

Go to "SIP Advanced Settings" from the menu on the left.

After "000|" add "101|"

Then press "Apply"

