


Netcomm NF18AVC - nbn Fibre to the Curb

Step 1:

Plug modem into computer with the yellow cable supplied. Plug it into a yellow plug on the modem

Step 2:

Open up your internet browser on your computer and use 192.168.20.1 as the URL.




Step 3:

When prompted enter the following

Username: admin

Password: admin

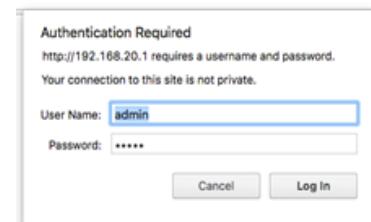

Step 4:

Click on "Basic Settings" from the menu on the left.



Step 5:

Select "Ethernet WAN" as your WAN connection type

Then click next

Basic > Quick Setup > Internet Setup (Select one DSL mode)

This Wizard is designed to walk you through the basic information needed to set up your device. To continue, please select your WAN connection type.

ADSL
 VDSL
 Ethernet WAN

Next

Step 6:

Select PPPoE as the internet connection

Then click next

Basic > Quick Setup > WAN Setup (Select one WAN mode)

Select the WAN mode for your internet connection as specified by your Internet Service Provider (ISP).

PPP Over Ethernet (PPPoE)
 IP over Ethernet (IPoE)

Back Next

Step 7:

Select "Custom VLAN Tag"

Set VLAN Tag to "100"

Then click next

Basic > Quick Setup > VLAN Setup

Please select the correct VLAN option for your connection. If you are unsure, please contact your ISP.

No VLAN Tag
 VLAN Tag 10 (For most New Zealand Customers)
 Custom VLAN Tag

VLAN Tag: (0-4094)

Back Next

Step 8:

Enter your username and password

Username – found in Simplicity

Password – found in Simplicity

Then click Finish.

Basic > Quick Setup > Ethernet WAN only > PPPoE Information

Enter the User ID and Password assigned to you by your Internet Service Provider (ISP).

User ID:
 Password:

Back Finish