

# D-Link DVA-2800 - NBN HFC

## Step 1:

Plug modem into computer with the yellow cable supplied. Plug it into the yellow plug on the modem


## Step 2:

Open up your internet browser on your computer and use 192.168.1.1 as the URL.




## Step 3:

When prompted enter the following  
Password: admin

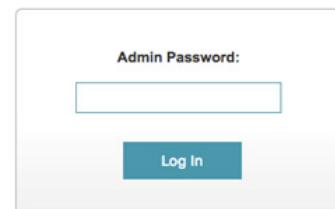


## Step 4:

Click on “Cancel” when the setup wizard pops up

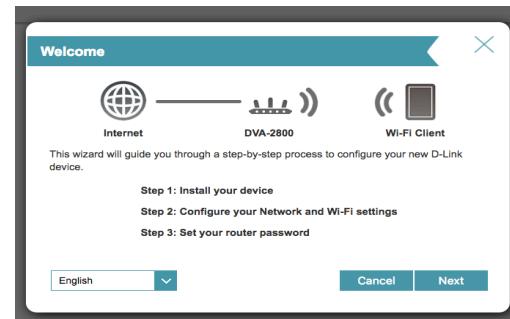

## Step 5:

Hover over “Settings” and then select “Wireless”

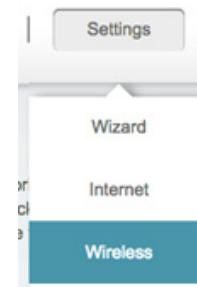

## Step 6:

2.4GHz:

Wi-Fi Name (SSID): LeapTel-(ServiceID)  
Password is found in simplicity or on the back of your modem.

Settings >> Wireless

2.4GHz

Status: <input checked="checked" type="button" value="Enabled"/>
Wi-Fi Name (SSID): <input type="text" value="LeapTel-2752"/>
Password: <input type="password" value="....."/>

[Advanced Settings](#)

5GHz:

Wi-Fi Name (SSID): LeapTel-(ServiceID)-5  
Password is found in simplicity or on the back of your modem.

5GHz

Status: <input checked="checked" type="button" value="Enabled"/>
Wi-Fi Name (SSID): <input type="text" value="LeapTel-2752-5"/>
Password: <input type="password" value="....."/>

[Advanced Settings](#)

Then click on “Save”

WI-FI PROTECTED SETUP

PBC:

# D-Link DVA-2800 - NBN HFC

## Step 7:

Hover over “Settings” and then select “Internet”



## Step 8:

Select “Residential Gateway” as your WAN access type

Enable the Interface

Enable VLAN Tagged:

Set VLAN ID to: 100

Set VLAN Priority to: 0

Your Internet Connection is: PPPoE

Your Username is: firstname.lastname@leaptel.com.au

Your Password is found in simplicity or on the back of your modem.

Then click “Save”

Then click on “Priority” (next to Save)

## Step 9:

Select “Ethernet0”

Then click “Save”

## Step 10:

Follow the instructions that came in the box on a double-sided piece of paper to plug in and connect your modem to the internet and then connect to your modem.