

# Modem Setup Instructions

NetComm NC17ACV

NBN FTTN Connection




## Step 1:

Plug modem into computer with the yellow cable supplied. Plug it into the yellow plug on the modem labelled **Eth. 1**

## Step 2:

Open up your internet browser on your computer and use 192.168.20.1 as the URL.




## Step 3:

When prompted enter the following


User Name: admin

Password: admin

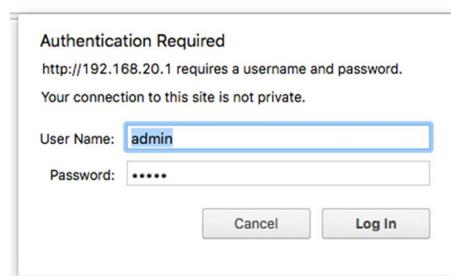

## Step 4:

Click on "Basic Settings" from the menu on the left.

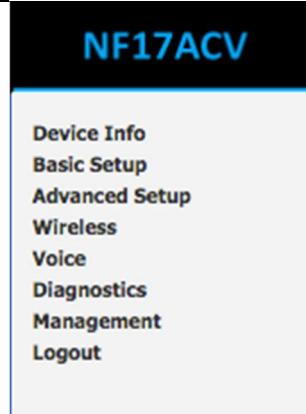

## Step 5:

Select "VDSL" as your WAN connection type

Then click next

Basic > Quick Setup > Internet Setup

This Wizard is designed to walk you through the basic information needed to set up your device. To continue, please select your WAN connection type.

ADSL  
 VDSL  
 Ethernet WAN

## Step 6:

Select "Custom VLAN Tag"

Set VLAN Tag to "100"

Basic > Quick Setup > VLAN Setup

Please select the correct VLAN option for your connection. If you are unsure, please contact your ISP.  
 No VLAN Tag  
 VLAN Tag 10 (For most New Zealand Customers)  
 Custom VLAN Tag  
VLAN Tag:

[Back](#) [Next](#)

## Step 7:

Enter your username and password that was provided to you in an email when you signed up.

Username: [your.name@leaptel.com.au](mailto:your.name@leaptel.com.au)

Password: as per email

Then click Finish.

Basic > Quick Setup > VDSL only > PPPoE Information

Enter the User ID and Password assigned to you by your Internet Service Provider (ISP).

User ID:   
Password:

[Back](#) [Finish](#)

## Step 8:

Follow the instructions that came in the box on a double-sided piece of paper to plug in and connect your modem to the internet and then connect to your modem.